



Autodesk





B-B

加护线齿

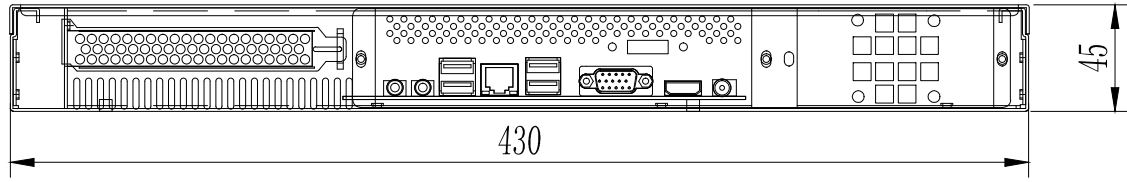


A-A

430

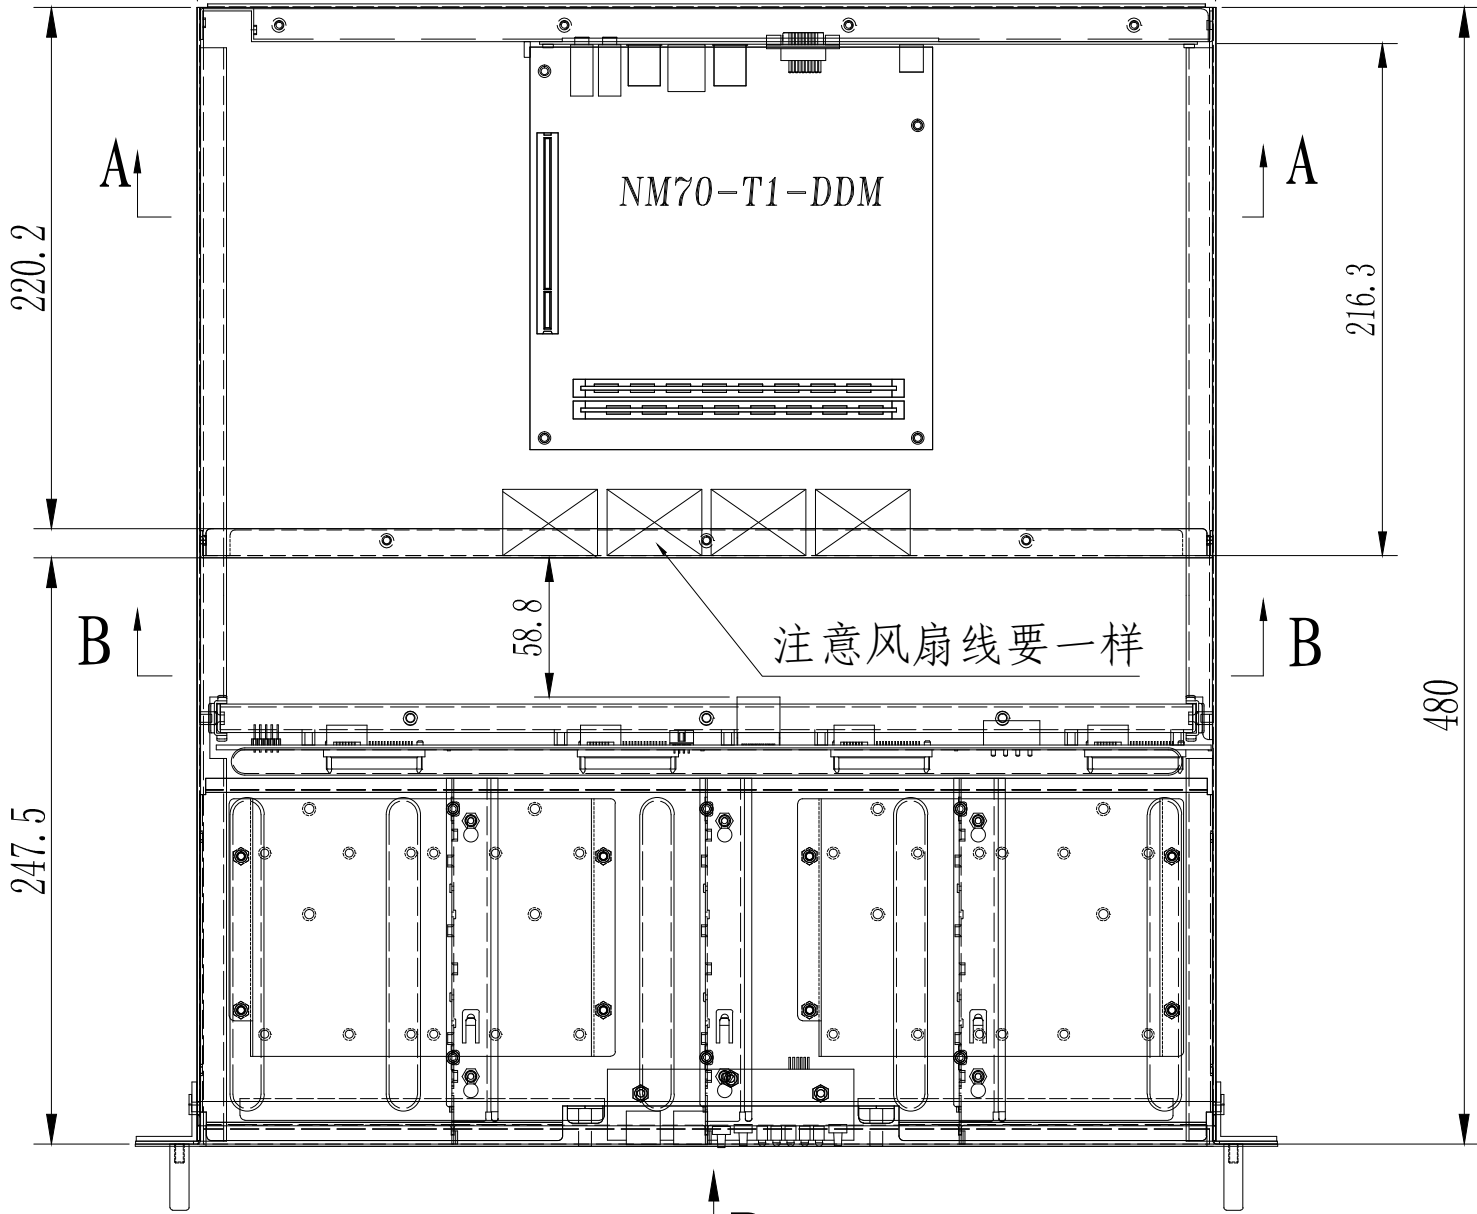


NM70-T1-DDM

注意风扇线要一样

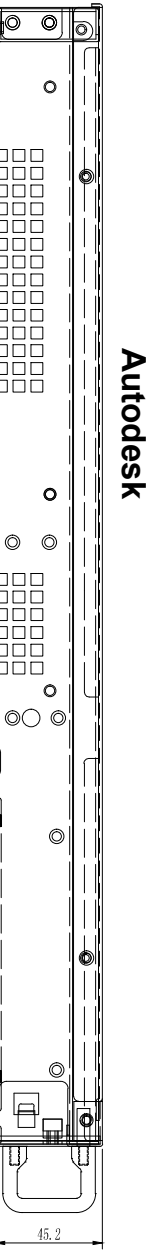

Autodesk

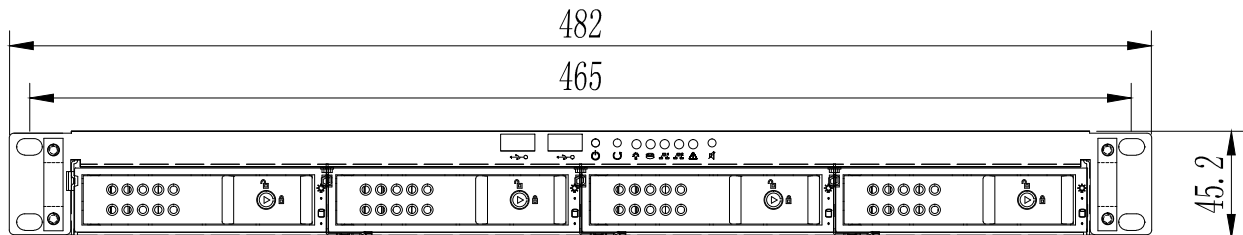

P向

MR148-4

Autodesk